

Biometric Driver Installation Step.


Here we use SecuGen Biometric Device for Authentication.

For that, Please install a Driver for that device in your machine as per your windows version.(If already installed then not required)


Driver Link- [Click Here](#)

1. Install below Web-api installer exe file in your local machine.


2. Then download the 32bit or 64bit driver according to your pc and then install driver according to below step.

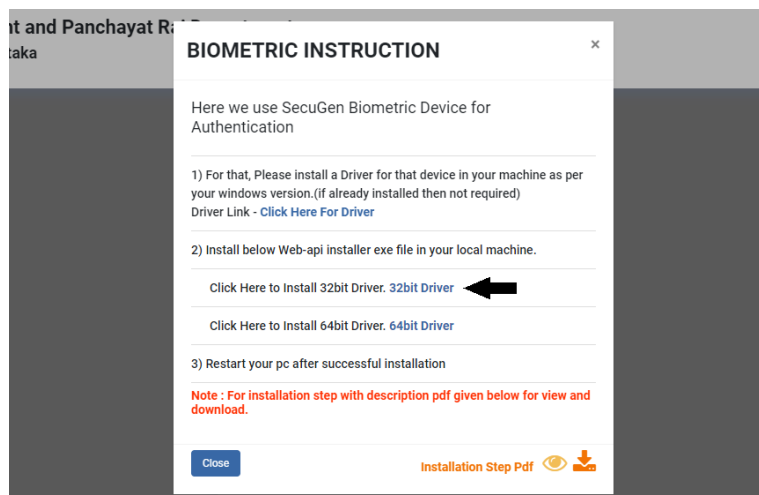


2.1 Then click on downloaded driver and you will see below picture.

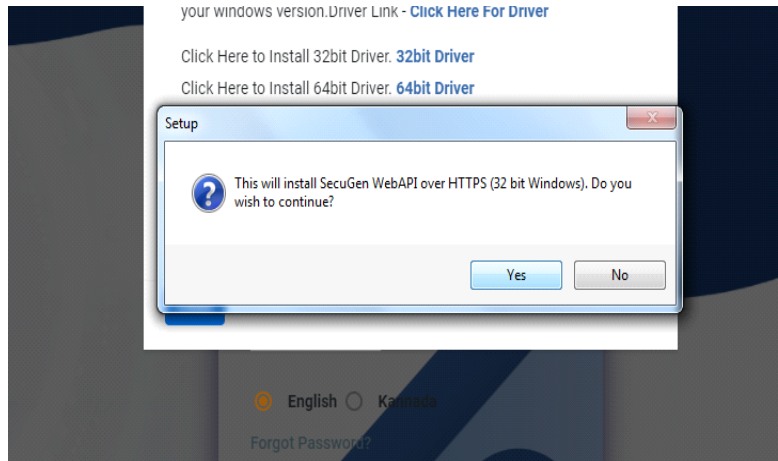


2.2 Click on yes.

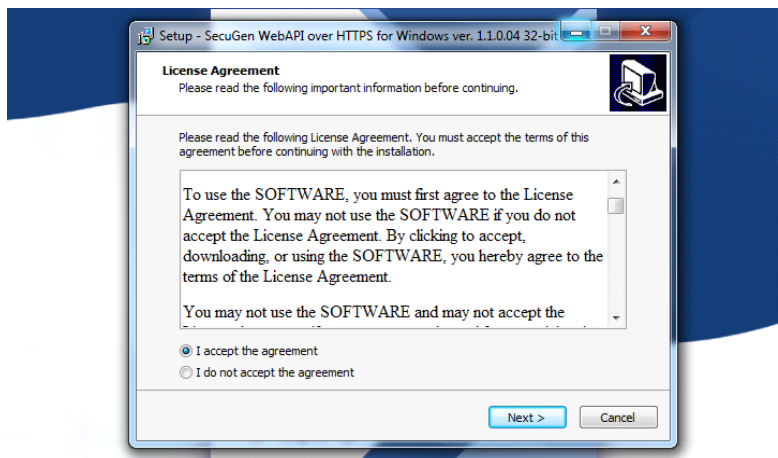


2.3 Click on accept the agreement and then click Next.

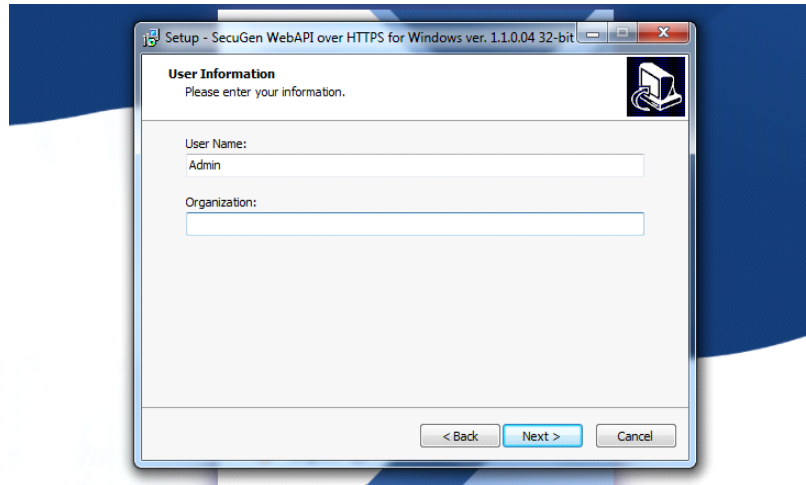


2.4 Set User Name and Organization(Optional) and then click Next.

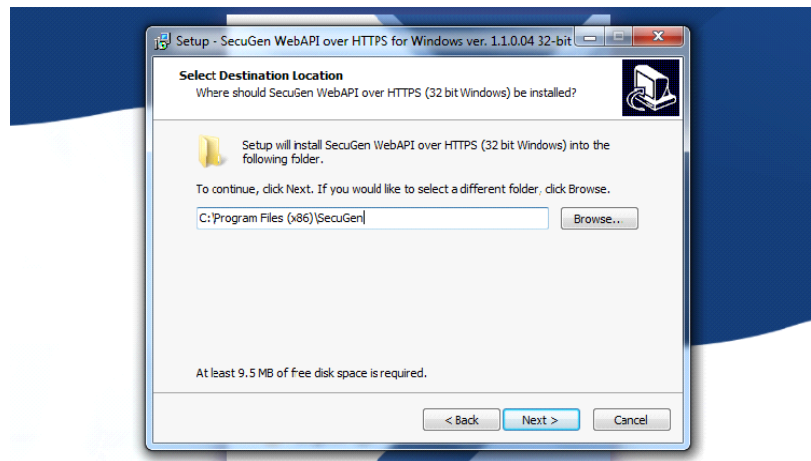

2.5 Choose your pc location where you want to install and then click Next.

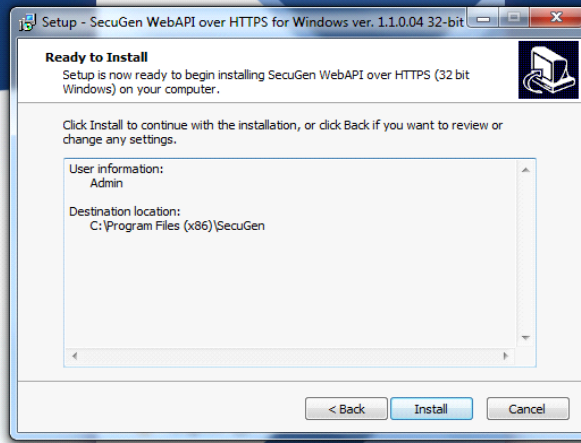

2.6 Then click on install.

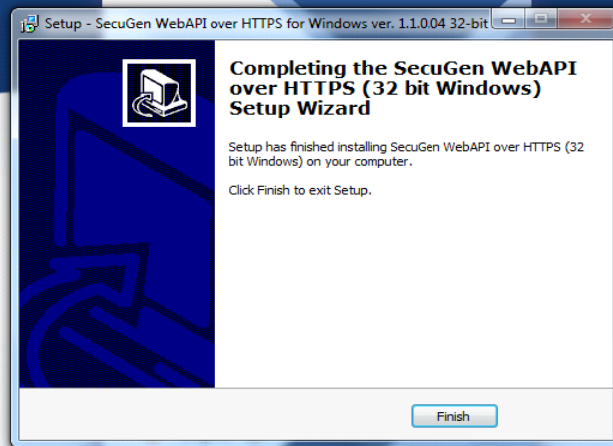

2.7 And then click on finish.

3. Restart your pc after successful installation